

# TTK 96 E / TTK 127 E

EN

INSTRUCTIONS  
DEHUMIDIFIER



**Table of contents**

**Information on the use of these instructions** ..... 2

**Safety** ..... 2

**Information about the device**..... 5

**Transport and storage**..... 6

**Assembly and start-up** ..... 7

**Operation** ..... 9


**Errors and faults** ..... 14

**Maintenance** ..... 16

**Technical annex**..... 20

**Disposal** ..... 27

You can download the current version of these instructions via the following link:

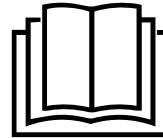

TTK 96 E



<https://hub.trotec.com/?id=42501>

TTK 127 E



<https://hub.trotec.com/?id=42502>

**Information on the use of these instructions**

**Symbols**

**Danger**  
This symbol indicates dangers to the life and health of persons due to extremely flammable gas.

**Warning**  
This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.

**Warning of electrical voltage**  
This symbol indicates dangers to the life and health of persons due to electrical voltage.

**Notice**  
This signal word indicates important information (e.g. material damage), but does not indicate hazards.

**Info**  
Information marked with this symbol helps you to carry out your tasks quickly and safely.

**Follow the manual**  
Information marked with this symbol indicates that the instructions must be observed.

**Safety**

**Read this manual carefully before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use.**

**Warning**  
**Read all safety warnings and all instructions.** Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

- Do not use the device in potentially explosive rooms or areas and do not install it there.
- Do not use the device in an aggressive atmosphere.
- Place the device in an upright and stable position on a horizontal and stable surface.
- Let the device dry out after a wet clean. Do not operate it when wet.
- Do not use the device with wet or damp hands.
- Do not expose the device to directly squirting water.
- Do not cover the device during operation.
- Do not sit on the device.

- This appliance is not a toy. Keep away from children and animals.
- Check the device occasionally during operation.
- Check accessories and connection parts for possible damage prior to every use of the device. Do not use any defective devices or device parts.
- Ensure that all electric cables outside of the device are protected from damage (e.g. caused by animals). Never use the device if electric cables or the power connection are damaged!
- The mains connection must correspond to the specifications in the Technical annex.
- Insert the mains plug into a properly fused mains socket.
- Observe the device's power input, cable length and intended use when selecting extensions to the power cable. Completely unroll extension cables. Avoid electrical overload.
- Do not under any circumstances use the device if you detect damages on the mains plug or power cable. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.  
Defective power cables pose a serious health risk!
- Before carrying out maintenance, care or repair work on the device, remove the mains plug from the mains socket. Hold onto the mains plug while doing so.
- Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- When positioning the device, observe the minimum distances from walls and other objects as well as the storage and operating conditions specified in the Technical annex.
- Make sure that the air inlet and outlet are not obstructed.
- Make sure that the suction side is kept free of dirt and loose objects.
- Never insert any objects or limbs into the device.
- Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.
- Only transport the device in an upright position with an emptied condensation tank/tray or drain hose.
- Discharge the collected condensate before transport and storage. Do not drink it. Health hazard!
- Only use original spare parts, for otherwise safe and functional operation cannot be ensured.



### Safety warnings for devices containing flammable refrigerants

- Only position the device in rooms where potentially leaking refrigerant cannot accumulate. Unventilated rooms in which the device is installed, operated or stored must be built in a way to ensure that potentially leaking refrigerant cannot accumulate. This serves to avoid fire or explosion hazards resulting from an ignition of the refrigerant by an electric furnace, cooking stove or another ignition source.

#### Warning

- Store the appliance in a room without continuously operating open flames (for example an operating gas appliance) or other potential ignition sources (for example an operating electric heater, hot surfaces).
- Please note that the refrigerant is odourless.
- Only install the device in compliance with the national installation regulations.
- Please observe the local regulations.
- Observe the national regulations for gas installations.
- Only install, operate and store the device in a room measuring more than 4 m<sup>2</sup>.
- Store the device in a way that no mechanical damage can occur.
- R290 is a refrigerant that complies with European environmental regulations. No part of the cooling circuit may be perforated.
- Observe the maximum refrigerant capacity in the technical data.
- Do not drill into or burn.
- Do not use any means other than those recommended by the manufacturer for accelerating the defrosting process or cleaning the device.
- Every person working with or at the refrigerant circuit must be able to provide a certificate of qualification issued by a body accredited by the industry, demonstrating their competence in the safe use of refrigerants based on a procedure well-known in the industry.
- Service work may only be carried out in accordance with the manufacturer's specifications. If maintenance and repair work require the support of additional persons, the person trained in handling flammable refrigerants shall continuously supervise the work carried out.
- The entire refrigerant circuit is a maintenance-free, hermetically sealed system and may only be maintained or repaired by specialist companies for cooling and air-conditioning or by the manufacturer.

**Intended use**

Only use the device for drying and dehumidifying room air, while adhering to and following the technical data.

In addition, the device may also be used as a kind of clothes dryer to dry wet laundry.

Intended use comprises:

- dehumidifying and drying:
  - living rooms, bedrooms and basements
  - bathrooms
  - holiday homes, caravans
- maintaining the dryness of:
  - storage spaces, archives, laboratories, garages
  - changing rooms etc.

Any use other than the intended use is regarded as misuse.

**Reasonably foreseeable misuse**

- The device is not intended for industrial use.
- Do not place any objects, e.g. clothing, on the device.
- Do not use outdoors.
- Do not use the device in the immediate vicinity of swimming pools, bathtubs and showers.
- Never immerse the device in water.
- Do not make any unauthorised modifications, alterations or structural changes to the device.
- Do not place the device on wet or flooded ground, e.g. near floor drains.

**Personnel qualification**

People who use this device must:

- have basic knowledge of how to safely handle electrical equipment.
- have read and understood the instructions, especially the Safety chapter.


Maintenance tasks which require the housing to be opened must only be carried out by specialist companies for cooling and air-conditioning or by the manufacturer.

**Safety signs and labels on the device**

**Notice**

Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.

The following safety signs and labels are attached to the device:

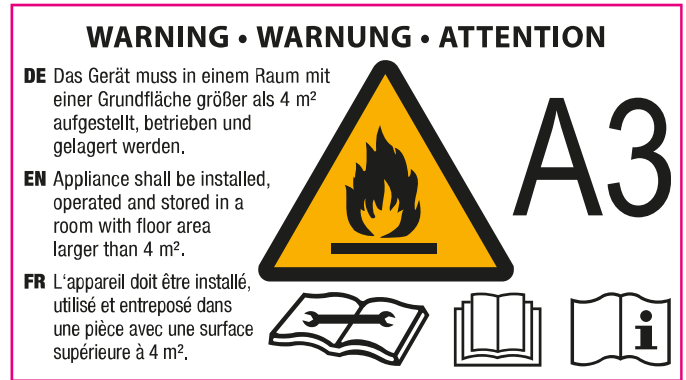

**Follow the manual**

This symbol indicates that the instructions must be observed.



**Follow the repair manual**

Disposal, maintenance and repair work of the refrigerant circuit may only be carried out in accordance with the manufacturer's specifications and by persons having a certificate of qualification. A corresponding repair manual is available from the manufacturer upon request.

## Residual risks



### **Danger**

#### **Natural refrigerant propane (R290)!**

H220 – Extremely flammable gas.

H280 – Contains gas under pressure; may explode if heated.

P210 – Keep away from heat, sparks, open flames and other ignition sources. No smoking.

P377 – Leaking gas fire: Do not extinguish, unless leak can be stopped safely.

P410+P403 – Protect from sunlight. Store in a well-ventilated place.



#### **Warning of electrical voltage**

Work on the electrical components must only be carried out by an authorised specialist company!



#### **Warning of electrical voltage**

Risk of electric shock!

The device is not protected against water.

There is a risk of electric shock!

Never use the device in areas where dripping, spraying or running water can enter the device! Never immerse the device in water!



#### **Warning of electrical voltage**

Risk of electric shock!

Risk of an electric shock if the device comes into contact with water!

Do not use this device in the immediate vicinity of bathtubs, showers or swimming pools!



#### **Warning of electrical voltage**

Before any work on the device, remove the mains plug from the mains socket!

Do not touch the mains plug with wet or damp hands.

Hold onto the mains plug while pulling the power cable out of the mains socket.

#### **Notice**

Do not operate the device without an air filter inserted into the air inlet!

Without the air filter, the inside of the device will be heavily contaminated. This can reduce the performance and result in damage to the device.

## Behaviour in the event of an emergency

1. Switch the device off.
2. Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
3. Do not reconnect a defective device to the mains.

## Information about the device

### Device description

The device uses the principle of condensation to automatically dehumidify rooms.

The fan sucks damp room air through the air inlet, the air filter, the evaporator and to the condenser located behind it.

The air is cooled at the cold evaporator until it is below the dew point. Water vapour contained in the room air precipitates on the evaporator fins as condensation or rime. The dehumidified, cooled air is slightly warmed at the condenser and blown out again. The drier air thus conditioned mixes with the air in the room. The humidity in the room where the device is positioned is reduced as air constantly circulates through the device.

Depending on the air temperature and the relative humidity, the condensed water either drops continuously or only during the defrost phase through the integrated drain nozzle into the condensation tank below. It is fitted with a float to measure the filling level.

The device has a control panel for operating and controlling the functions.

Once the maximum filling level of the condensation tank is reached or in case the condensation tank is not installed correctly, the condensation tank indicator light (see chapter Operation) on the control panel is illuminated. The device switches off. The condensation tank indicator light only goes out again once the emptied condensation tank is reinserted.

Optionally, the condensed water can be drained by attaching a hose at the condensation connection.


The device can reduce the relative humidity of a room to approx. 35 %.

In addition, the device may also be used as a kind of clothes dryer to dry wet laundry in living or working spaces.

Because of the heat radiation generated during operation, the room temperature may rise slightly.

The device is not protected against water (IPX0).

**Device depiction**

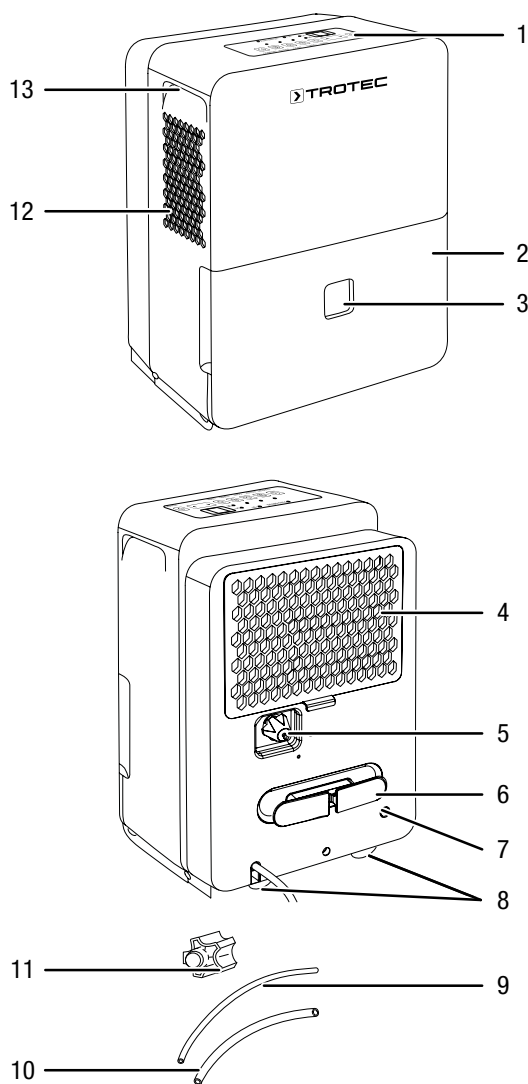

No.	Designation
1	Control panel
2	Condensation tank
3	Filling level indication
4	Air inlet with air filter
5	Condensation hose connection with sealing cap
6	Power cable holder
7	Condensation drain hose connection (only for pump function of the TTK 127 E)
8	Wheels
9	White condensation drain hose for connection (7) (only for pump function of the TTK 127 E)
10	Transparent condensation drain hose for connection (5)
11	Hose adapter for condensation drain hose
12	Air outlet
13	Transport handle

**Transport and storage**

**Notice**

If you store or transport the device improperly, the device may be damaged.  
 Note the information regarding transport and storage of the device.

**Transport**

Please note that additional transport regulations might apply to devices containing flammable refrigerants. The equipment's arrangement and the maximum number of components to be transported together can be gathered from the applicable transport regulations.

To make the device easier to transport, it is fitted with a handle.  
 To make the device easier to transport, it is fitted with wheels.

**Before** transporting the device, observe the following:

- Switch the device off.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- Drain the remaining condensate from the device and the condensation drain hose (see chapter Maintenance).
- Do not use the power cable to drag the device.
- Only wheel the device on firm and level surfaces.

**After** transporting the device, proceed as follows:

- Set up the device in an upright position after transport.

**Storage**

**Before** storing the device, observe the following:

- Drain the remaining condensate from the device and the condensation drain hose (see chapter Maintenance).
- Clean the condensation tank and/or the condensation drain hose if necessary (see chapter Maintenance).
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.

When the device is not being used, observe the following storage conditions:

- Only store the device in a room measuring more than 4 m<sup>2</sup>.
- Only position the device in rooms where there is no source of ignition (e.g. open flames, an active gas appliance, an electric heater).
- Store the device in a dry location and protected from frost and heat.
- Store the device in an upright position where it is protected from dust and direct sunlight.
- If required, use a cover to protect the device from invasive dust.
- Place no further devices or objects on top of the device to prevent it from being damaged.

## Assembly and start-up

### Scope of delivery

- 1 x Device
- 1 x Air filter
- 1 x Power cable holder
- 1 x Hose adapter for condensation drain hose
- 1 x Condensation drain hose, transparent, length: 0.6 m, diameter: 14 mm
- 1 x Condensation drain hose, white, length: 4.7 m, diameter: 6.35 mm
- 1 x Manual

### Unpacking the device




#### Warning

There is a danger of suffocation for children due to packaging material! Keep packaging films and parts away from children. There is a risk of death due to suffocation.

1. Open the cardboard box and take the device out.
2. Completely remove the packaging.
3. Fully unwind the power cable. Make sure that the power cable is not damaged and that you do not damage it during unwinding.

### Start-up

When positioning the device, observe the minimum distance from walls or other objects as described in the chapter Technical annex.

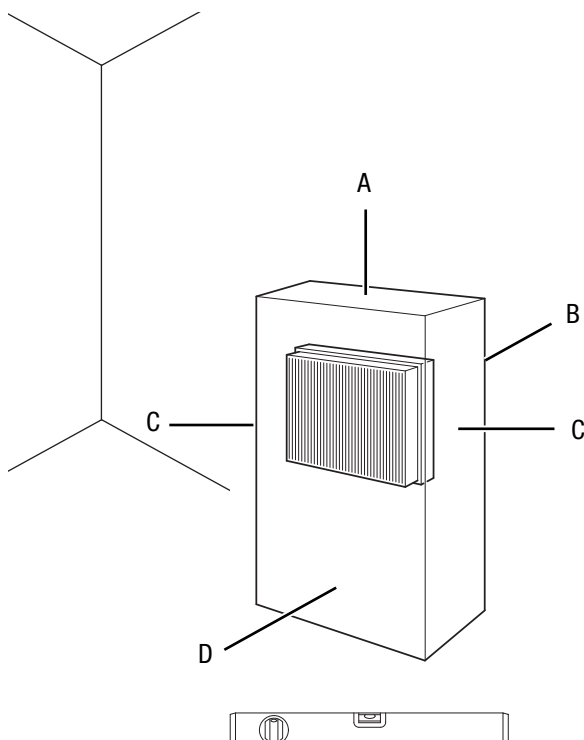


- Before restarting the device, check the condition of the power cable. If there are doubts as to the sound condition, contact the customer service.
- Only position the device in rooms where potentially leaking refrigerant cannot accumulate.
- Store the appliance in a room without continuously operating open flames (for example an operating gas appliance) or other potential ignition sources (for example an operating electric heater, hot surfaces).
- Place the device in an upright and stable position on a horizontal and stable surface.
- Do not create tripping hazards when laying the power cable or other electric cables, especially when positioning the device in the middle of the room. Use cable bridges.
- Make sure that extension cables are completely unrolled.
- When positioning the device, keep a sufficient distance to heat sources.
- Make sure that no curtains or other objects interfere with the air flow.

### Inserting the air filter

#### Notice


Do not operate the device without an air filter inserted into the air inlet!

Without the air filter, the inside of the device will be heavily contaminated. This can reduce the performance and result in damage to the device.

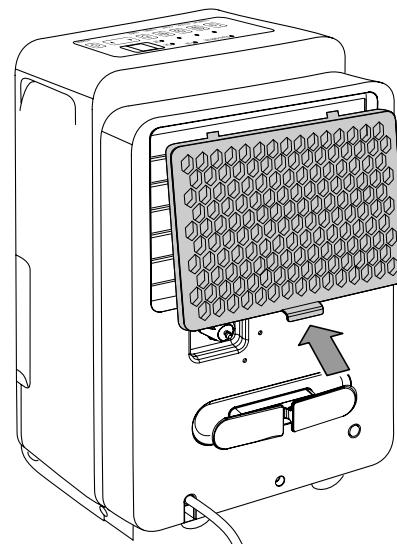

**Assembling the power cable holder**

1. Remove the condensation tank.

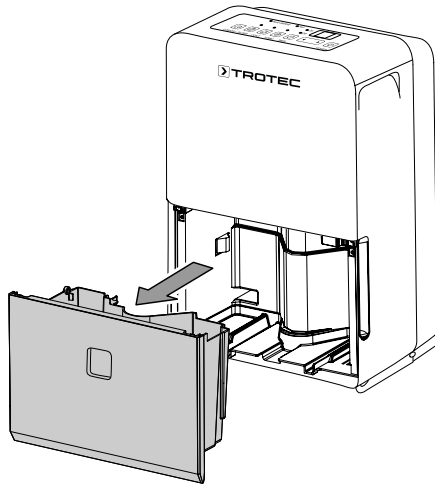

5. Check the holder for tight fit.  
⇒ If needed, you may now wind the power cable around the holder.


**Inserting the condensation tank**

- Ensure that the float inside the condensation tank is inserted correctly.
- Ensure that the condensation tank is empty and inserted correctly.


**Connecting the power cable**

- Insert the mains plug into a properly secured mains socket.

2. Remove the power cable holder (6), the two condensation drain hoses (9 and 10) and the hose adapter (11) from the condensation tank.
3. Put the condensation tank back in.

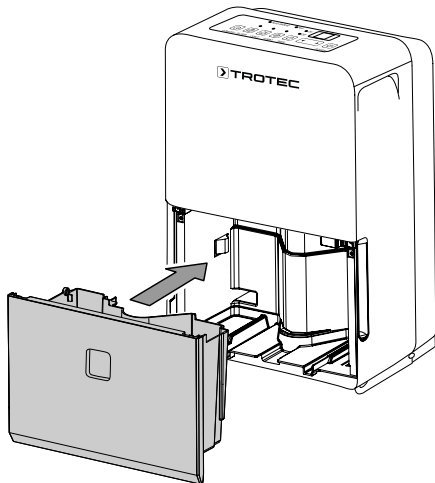

4. Press the holder into the provided recess.

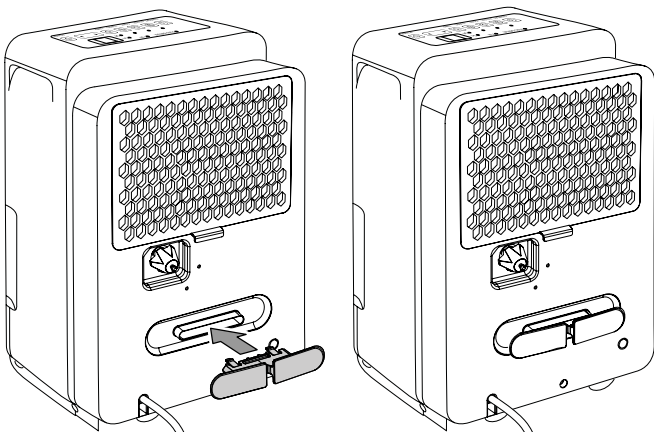


⇒ The holder should click into place.

## Operation


- Avoid open doors and windows.
- After being switched on, the device operates fully automatically.
- The fan permanently runs in dehumidification mode even after the set nominal value has been reached until the device is switched off.

## Operating elements

### TTK 96 E

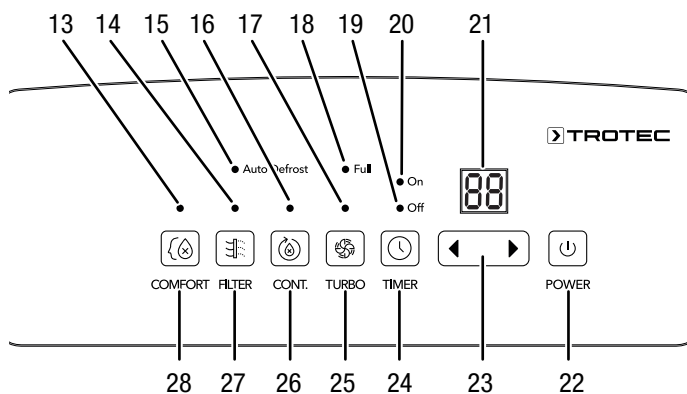

### TTK 127 E

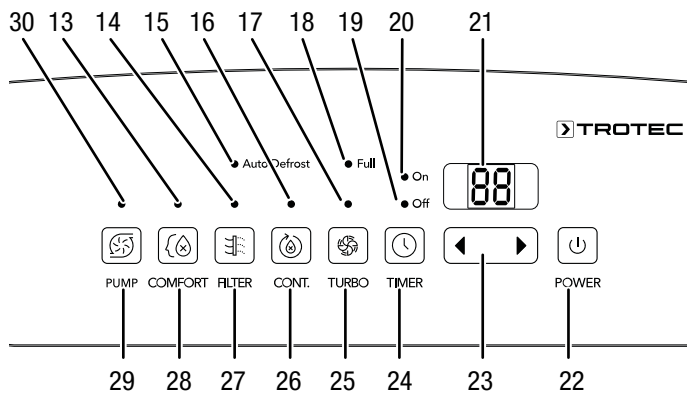

No.	Designation	Meaning
21	Segment display	Indication of the current relative room humidity level Indication of the relative room humidity level during set-up (35 % to 85 %) Indication of the current room humidity level (30 % bis 90 %) Indication of the number of hours during timer programming (0 h – 24 h) Display of error codes
22	POWER button	Power button: Switching the device on or off
23	Selection button	◀ = Decrease value ▶ = Increase value For the humidity level: 35 % to 85 % in increments of 5 % For the timer function: 0 to 10 h in increments of 0.5 h 10 to 24 h in increments of 1 h
24	TIMER button	Switches the timer function on or off.
25	TURBO button	Sets the fan speed: Stage 1 = normal Stage 2 = high (laundry drying function)
26	CONT. button	Switches continuous operation on or off.
27	FILTER button	Resets the cleaning cycle for the filter.
28	COMFORT button	Switches comfort mode on or off.
29	PUMP button	Switches the pump for the condensate outlet on or off
30	PUMP LED	Pump for condensate outlet is active



### Warning of electrical voltage

Risk of electric shock!

The device is not protected against water.

There is a risk of electric shock!

Never use the device in areas where dripping, spraying or running water can enter the device! Never immerse the device in water!

No.	Designation	Meaning
13	COMFORT LED	Comfort mode active
14	FILTER LED	Filter needs to be cleaned
15	Auto defrost LED	Automatic defrosting active
16	CONT. LED	Continuous operation mode active
17	TURBO LED	Fan runs at stage 2 (high fan speed)
18	Full LED	Condensation tank full or not inserted correctly
19	Off LED	Timer for automatic switch-off active
20	On LED	Timer for automatic switch-on active

### Switching the device on

Once you have completely installed the device as described in the chapter Assembly and start-up, you can switch it on.

1. Press the *POWER* button (22).  
⇒ The device starts to dehumidify.

### Setting the operating mode

- Dehumidification
- Continuous operation
- Comfort mode
- Laundry drying function

### Dehumidification

The device keeps running until reaching the desired relative room humidity. Then the compressor switches off, but the fan keeps running. Once the desired relative room humidity is exceeded, the compressor switches back on.

In this operating mode, the desired relative room humidity can be set at any time in increments of 5 % within a setting range of 35 % to 85 %.

### Setting the desired relative room humidity

The desired relative room humidity can be preselected at any time.

1. Press the left or right-hand side of the selection button (23) to adjust the relative room humidity level.  
⇒ The value for desired room humidity is indicated on the segment display (21) for approx. 5 seconds.  
⇒ Then the currently measured humidity level reappears on the segment display (21).  
⇒ The device switches off automatically upon reaching the desired value for the relative room humidity.

### Setting the fan speed

Using this function you can choose between a low and a high fan speed. The fan speed can only be adjusted in *dehumidification* mode. The default setting for the *laundry drying function* is the highest level.

1. Press the *TURBO* button (25) to switch between the normal and high fan speed.  
⇒ The *TURBO* LED (17) is illuminated when the fan runs at high speed.

### Continuous operation mode

The device dehumidifies the air constantly and regardless of the current humidity level.

Please proceed as follows to enable continuous operation:

1. Press the *CONT* button (26) to switch continuous operation on or off.  
⇒ With activated continuous operation, the *CONT.* LED (16) is illuminated.



#### Info

For continuous operation the condensation drain hose can be connected in order to continuously drain the accumulating condensate.

### Comfort mode

Comfort mode ensures an agreeable humidity level ranging between 45 % and 55 %. Depending on the room temperature the device automatically regulates the convenient humidity level choosing a value from 45 % - 50 % - 55 %.

In this operating mode it is not possible to regulate the humidity level manually.

1. Press the *COMFORT* button (28) to switch comfort mode on or off.

### Setting the timer

For the device to switch on or off automatically after a predefined number of hours (max. 24 hrs) you can programme the timer.

The timer can be programmed in increments of 0.5 hours (0 to 10 h) or in increments of 1 hour (10 to 24 h).

The timer can be set in all operating modes.

You can activate the function regardless of the device being switched on or off.

#### Notice

The device must not be left unattended in a freely accessible room with an activated timer.

### Automatic switch-on

- ✓ The device is switched off.
1. Press the *TIMER* button (24) to programme automatic switch-on.  
⇒ The *On* LED (20) is illuminated.  
⇒ The segment display (21) indicates the number of hours until automatic switch-on. Standard: 0.0
  2. Press the *Increase value* or *Decrease value* selection buttons (23) to set the desired number of hours until automatic switch-on.  
⇒ The number of hours is indicated on the segment display (21) for approx. 5 seconds.  
⇒ The timer setting equals the desired number of hours.  
⇒ After the predefined time, the device switches itself on.  
⇒ The current room humidity level is shown.

### Automatic switch-off

- ✓ The device is switched on.
1. Press the *TIMER* button (24) to programme automatic switch-off.  
⇒ The *Off* LED (19) is illuminated.  
⇒ The segment display (21) indicates the number of hours until automatic switch-off. Standard: 0.0
  2. Press the *Increase value* or *Decrease value* selection buttons (23) to set the desired number of hours until automatic switch-off.  
⇒ The number of hours is indicated on the segment display (21) for approx. 5 seconds. Then the current humidity level of the room will be indicated.

3. The device keeps running until the given switch-off time has expired or until the device is switched off manually.
  - ⇒ The timer setting equals the desired number of hours.
  - ⇒ After the predefined time, the device switches itself off.

#### Notice

You can deactivate automatic switch-on and switch-off by setting the respective number of hours back to 0 or by manually switching the device on or off.

If error code *P2* is indicated on the segment display (21), the timer is also disabled.

A full condensation tank can cause the device to be switched off before the set number of hours until automatic switch-off have elapsed.

Automatic switch-on and automatic switch-off may be enabled at the same time. The LEDs *On* (20) and *Off* (19) on the control panel will then be illuminated simultaneously.

#### Memory function

In case of brief power failures the device memorizes the programmed nominal value for humidity. The pre-programmed start and stop times for automatic operation are not saved.

#### Auto stop function

If the water tank is full, not inserted correctly or the set humidity level has been reached, the device stops automatically. The compressor and fan of both devices will switch off.

If the condensation tank is full or not inserted correctly, in the case of the TTK 96 E the *Full* LED (18) is illuminated and the message *P2* appears on the segment display (21).

If the condensation tank of the TTK 127 E is full, the *Full* LED (18) is also illuminated and the message *P2* appears on the segment display (21).

If the condensation tank of the TTK 127 E is not fitted correctly, the message *EB* appears on the segment display (21).

If you remove the condensation tank whilst the device is switched on, the compressor and fan will switch off. Shortly afterwards the device will switch on again, emit a few beeps, and the error message *EB* will appear.

If you remove the condensation tank whilst the device is switched off and then switch the device back on again, the device will emit a few beeps and the error message *EB* will appear.

Proceed as described in the chapter Maintenance in the section *Emptying the condensation tank and cleaning the pump filter*.

### Operation with hose attached to the condensation connection

#### Notice

When the pump of the TTK 127 E is activated, only the white condensation drain hose (9) may be connected (see *Operation with hose attached to the condensation connection while the pump function is activated*).

#### Notice


At outdoor temperatures above or below 0 °C, the hose must not be installed so that it is outside. Otherwise there is a risk of the hose and possibly the device being damaged by frost.

Also observe the technical data for the device's operating temperature.

The transparent condensation drain hose (10) can be connected for continuous operation or for unattended dehumidification in any operating mode (except for the pump function of the TTK 127 E).


- ✓ The supplied hose (10) is ready for use.
- ✓ The supplied hose adapter (11) is ready for use.
- ✓ The device is switched off.

1. Unscrew the sealing cap from the connection (5). Keep the screws safe for later use.

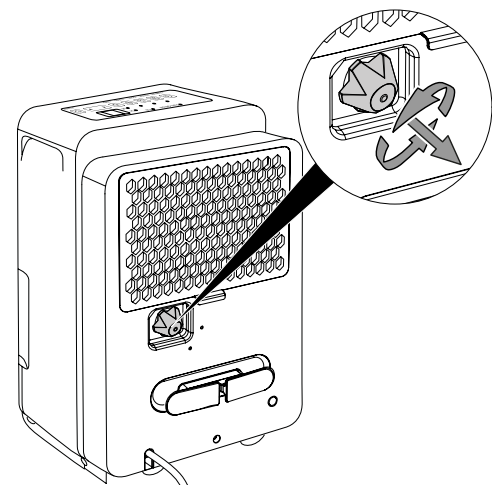


2. Screw the hose adapter (11) onto the connection.

3. Push one end of the hose onto the hose adapter.

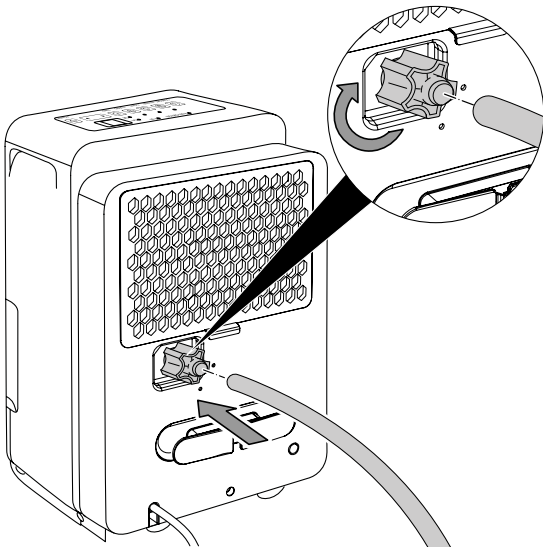

4. Guide the other hose end to a suitable drain or sufficiently dimensioned collection container. Please note that the hose must not be kinked.

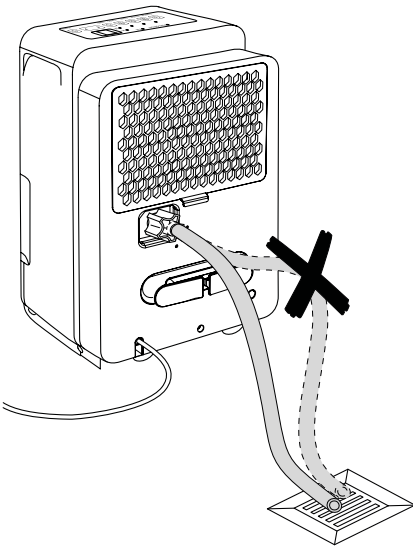

5. Remove the hose (10) if you want to collect the condensate in the condensation tank again.  
6. Allow the hose to dry prior to storage.

**Operation with hose at the connection (7) while pump function is activated (TTK 127 E)**

**Notice**

In the first 3 to 5 minutes upon activation, the pump may cause loud noises.

**Notice**

The *PUMP* LED (30) flashes when an operating fault is pending. Switch the device off and disconnect the power cable from the socket. Hold onto the mains plug while doing so.

Clean the filter of the pump as described in the section *Emptying the condensation tank and cleaning the pump filter*.

**Notice**


At outdoor temperatures above or below 0 °C, the hose must not be installed towards the outside. Otherwise there is a risk that the hose and possibly the device may be damaged by frost.

Also observe the technical data for the device's operating temperature.


The pump function allows for quick emptying of the full water tank. Do not use the pump function in continuous operation.

- ✓ The supplied hose (9) is ready for use.
- ✓ The device is switched off.
- ✓ Ensure that the top cover flap is screwed onto the condensation connection (5).

1. Insert the hose (9) into the connection (7).  
⇒ Observe that the hose must be inserted to a depth of 15 mm into the condensation connection.

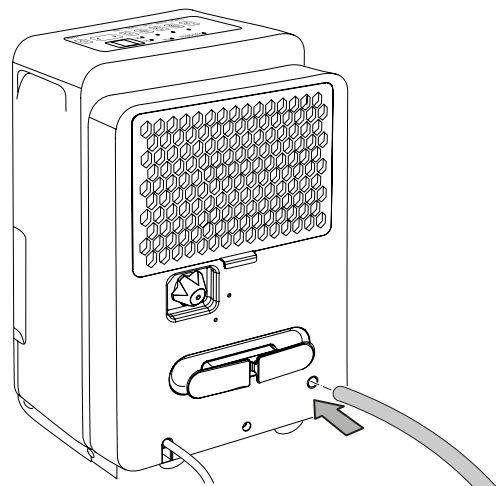

2. Guide the other hose end to a suitable drain or sufficiently dimensioned collection container. Please note that the hose must not be kinked.

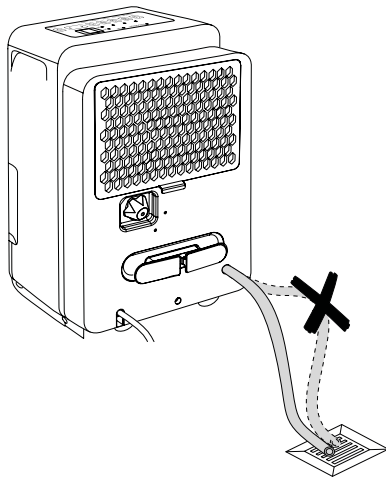

3. Press the *PUMP* button (29) to activate the pump for the condensate outlet.
  - ⇒ The *PUMP* LED (30) is illuminated.
  - ⇒ The condensate is pumped out of the water tank as soon as the latter is full.
4. Press the *PUMP* button (29) again to switch the pump off.
  - ⇒ The *PUMP* LED (30) goes out.
5. Remove the hose (9) if you want to collect the condensate in the condensation tank again.
6. Allow the hose to dry prior to storage.

### Automatic defrost

At low ambient temperatures, ice may form at the evaporator during dehumidification. The device will then carry out an automatic defrost. Dehumidification is briefly interrupted during defrosting. The fan keeps running.

The duration of the defrost process can vary. Do **not** switch off the device during automatic defrost. Do **not** remove the mains plug from the mains socket.

### Drying laundry

In addition, the device may also be used as a kind of clothes dryer to dry wet laundry in living or working spaces.

When positioning the device or a clothes horse, please observe the minimum distances specified in the technical data.

The following humidity values are suitable for drying laundry:

- cupboard dry = 46 % relative humidity
- iron dry = 58 % relative humidity
- slightly dried = 65 % relative humidity

Adjust the settings for the relative humidity level to the device (e.g. 60 % relative humidity for iron dry laundry). If necessary, use a measuring device to determine the humidity level.

1. Press the *TURBO* button (25) to set the high fan speed (stage 2).
  - ⇒ The *TURBO* LED (17) is illuminated.
  - ⇒ The function for drying laundry is activated.

### Shutdown



#### Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Switch off the device.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- If necessary, remove the condensation drain hose and any residual fluid from it.
- Empty the condensation tank/tray if necessary.
- If required, clean the device according to the "Maintenance" chapter.
- Store the device according to the Transport and storage chapter.

## Errors and faults

The device has been checked for proper functioning several times during production. If malfunctions occur nonetheless, check the device according to the following list.

### Notice

Wait for at least 3 minutes after maintenance and repair work. Only then switch the device back on.

### The device does not start:

- Check the power connection.
- Check the power cable and mains plug for damage.
- Check the on-site fusing.
- Check the filling level of the condensation tank and empty it if necessary. The *Full* LED (18) must not be illuminated.
- Check the condensation tank for correct seating.
- Check the room temperature. Observe the device's permissible operating range according to the technical data.
- If the device is not starting, have the electrics checked by a specialist company or by the manufacturer.

### Condensate is leaking from the bottom condensation connection (7):

- Check whether you have activated the pump function without fitting the hose (9) on the bottom condensation connection (7). If you want to activate the pump function, please proceed as described in the chapter Operation in the section *Operation with hose at the connection (7) while pump function is activated (TTK 127 E)*. However, if you want to activate continuous dehumidification, you have to use a different condensation connection. In this case, please proceed as described in the chapter Operation in the section *Operation with hose attached to the condensation connection*.

### The device is running, but there is no formation of condensate:

- Check the float in the condensation tank for dirt. If necessary, clean the condensation tank. The float must be able to move freely.
- Check the room temperature. Observe the device's permissible operating range according to the technical data.
- Ensure that the relative room humidity complies with the technical data.
- Check the preselected relative room humidity. The humidity in the room must be above the selected range.
- Check whether the device is running in *comfort mode*. In this case, the compressor switches off automatically once the relative room humidity is below 45 %.
- Check the air filter for dirt. If necessary, clean or replace the air filter.

- From the outside, check the condenser for dirt (see chapter Maintenance). If the condenser is dirty, have it cleaned by a specialist company or by the manufacturer.
- The device might carry out an automatic defrost. During automatic defrost, the device does not dehumidify.

### The device is loud or vibrates:

- Check whether the device is set up in a stable and upright position.

### Condensate is leaking:

- Check the device for leaks.

### The compressor does not start:

- Check the room temperature. Observe the device's permissible operating range according to the technical data.
- Ensure that the relative room humidity complies with the technical data.
- Check the preselected relative room humidity. The humidity in the room must be above the selected range.
- Check whether the device is running in *comfort mode*. In this case, the compressor switches off automatically once the relative room humidity is below 45 %.
- Check whether the overheating protection of the compressor has tripped. Disconnect the device from the mains and let it cool down for approx. 10 minutes before reconnecting it.
- The device might carry out an automatic defrost. During automatic defrost, the device does not dehumidify.

### The device gets very warm, is loud or is losing power:

- Check the air inlet and air filter for dirt. Remove external dirt.
- From the outside, check the device for dirt (see chapter Maintenance). If the inside of the device is dirty, have it cleaned by a specialist company for cooling and air-conditioning or by the manufacturer.

### The device still does not operate correctly after these checks:

Please contact the customer service. If necessary, bring the device to a specialist company for cooling and air-conditioning or to the manufacturer for repair.

## Error codes

The following error codes can be displayed:

Error code	Cause	Remedy
AS	Error humidity sensor	Disconnect the device briefly from the mains. Should the error still be displayed after the restart, please contact the customer service.
ES	Error at the temperature sensor of the evaporator	Disconnect the device briefly from the mains. Should the error still be displayed after the restart, please contact the customer service.
P2 (TTK 96 E)	Condensation tank full or not inserted correctly	Empty the condensation tank or check the condensation tank for correct fit.
P2 (TTK 127 E)	Condensation tank full	Empty the condensation tank.
EB (TTK 127 E)	Condensation tank not installed correctly	Check the condensation tank for proper fit.
EC	Leakage in the refrigerant circuit	Switch the device off and contact the customer service. Also see the information regarding the refrigerant circuit in chapter Maintenance.
E3	General fault at the device	Disconnect the device briefly from the mains. Should the error still be displayed after the restart, please contact the customer service.

## Maintenance

## Maintenance intervals

Maintenance and care interval	before every start-up	as needed	at least every 2 weeks	at least every 4 weeks	at least every 6 months	at least annually
Check air inlet and outlet for dirt and foreign objects and clean if necessary	X			X		
Clean the exterior		X				X
Visually check the inside of the device for dirt		X				X
Check the air filter for dirt and foreign objects and clean or replace if necessary	X		X			
Replace the air filter					X	
Changing and cleaning the pump filter		X				X
Check for damage	X					
Check the attachment screws		X				X
Test run						X
Empty and clean the condensation tank and/or drain hose		X				

## Maintenance and care log

Device type: .....

Device number: .....

Maintenance and care interval	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Check air inlets and outlets for dirt and foreign objects and clean if necessary																
Check the air filter for dirt and foreign objects and clean or replace if necessary																
Clean the exterior																
Visually check the inside of the device for dirt																
Replace the air filter																
Changing and cleaning the pump filter																
Check the attachment screws																
Test run																
Empty and clean the condensation tank and/or drain hose																
Comments																

1. Date: ..... Signature: .....	2. Date: ..... Signature: .....	3. Date: ..... Signature: .....	4. Date: ..... Signature: .....
5. Date: ..... Signature: .....	6. Date: ..... Signature: .....	7. Date: ..... Signature: .....	8. Date: ..... Signature: .....
9. Date: ..... Signature: .....	10. Date: ..... Signature: .....	11. Date: ..... Signature: .....	12. Date: ..... Signature: .....
13. Date: ..... Signature: .....	14. Date: ..... Signature: .....	15. Date: ..... Signature: .....	16. Date: ..... Signature: .....

## Activities required before starting maintenance



### Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.



### Warning of electrical voltage

Tasks which require the device to be opened must only be carried out by authorised specialist companies or by the manufacturer.

## Refrigerant circuit



### Danger

#### Natural refrigerant propane (R290)!

H220 – Extremely flammable gas.

H280 – Contains gas under pressure; may explode if heated.

P210 – Keep away from heat, sparks, open flames and other ignition sources. No smoking.

P377 – Leaking gas fire: Do not extinguish, unless leak can be stopped safely.

P410+P403 – Protect from sunlight. Store in a well-ventilated place.

- The entire refrigerant circuit is a maintenance-free, hermetically sealed system and may only be maintained or repaired by specialist companies for cooling and air-conditioning or by the manufacturer.

## Safety signs and labels on the device

Check the safety signs and labels attached to the device at regular intervals. Replace illegible safety signs!


## Cleaning the housing

Clean the housing with a soft, damp and lint-free cloth. Make sure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.

## Visual inspection of the inside of the device for dirt

1. Remove the air filter.
2. Use a torch to illuminate the openings of the device.
3. Check the inside of the device for dirt.
4. If you see a thick layer of dust, have the inside of the device cleaned by a specialist company for cooling and air-conditioning or by the manufacturer.

5. Put the air filter back in.

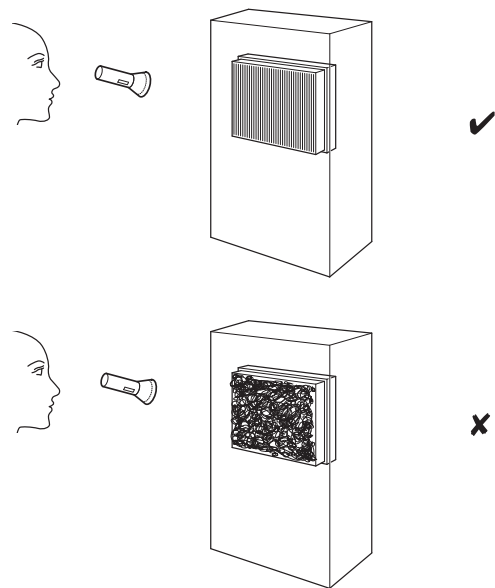


## Cleaning the air filter

### Notice


Ensure that the air filter is not worn or damaged. The corners and edges of the air filter must not be deformed or rounded. Before reinserting the air filter, make sure that it is undamaged and dry!

The filter must be cleaned when dirt is visible or after 250 operating hours when the *Filter* LED (14) lights up.


1. Remove the air filter from the device.

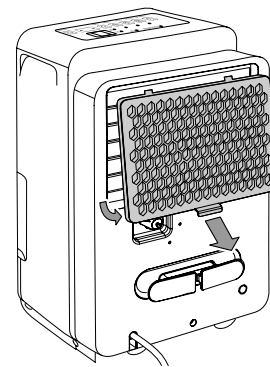

- Clean the filter using a slightly damp, soft, lint-free cloth. If the air filter is heavily contaminated, clean it with warm water mixed with a neutral cleaning agent.

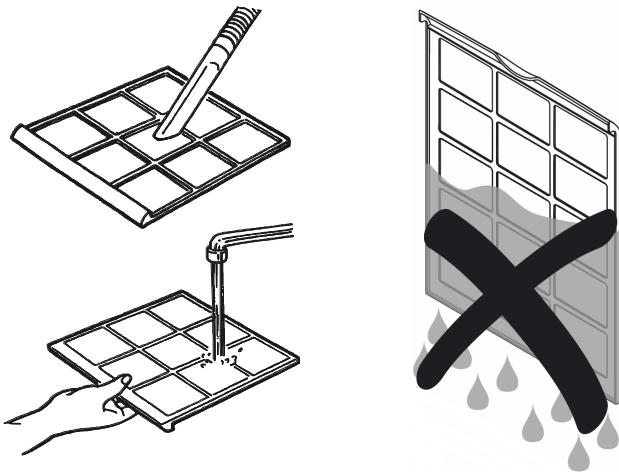

- Allow the filter to dry completely. Do not insert a wet filter into the device!
- Reinsert the air filter into the device.

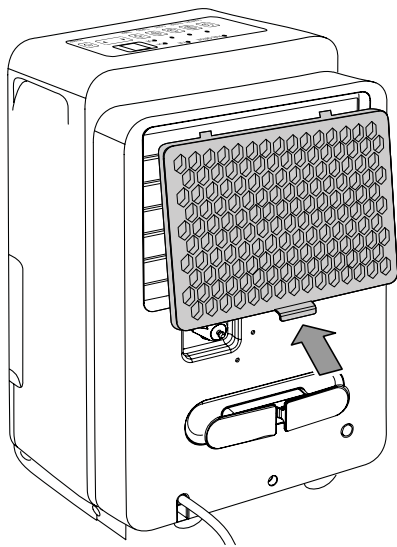

- Press the *FILTER* button (27) to carry out a filter reset. This is only possible when the *Filter* LED (14) was previously illuminated. After the reset the LED goes out.

### Emptying the condensation tank and cleaning the pump filter

If the water tank is full, not inserted correctly or the set humidity level has been reached, the device stops automatically. The compressor and fan of both devices will switch off.

If the condensation tank is full or not inserted properly, in the case of the TTK 96 E the *Full* LED (18) is illuminated and the message *P2* appears on the segment display (21).

If the condensation tank of the TTK 127 E is full, the *Full* LED (18) is also illuminated and the message *P2* appears on the segment display (21).

If the condensation tank of the TTK 127 E is not fitted properly, the message *EB* appears on the segment display (21).


The *PUMP* LED (30) of the TTK 127 E flashes when the pump filter has to be cleaned.

For emptying the condensation tank and cleaning the pump filter, the condensation tank has to be removed in each case.


#### Notice

Ensure that the pump filter is not worn or damaged. The filter must not be deformed. Before reinserting the filter, ensure that it is undamaged!


- Take the condensation tank out of the device.

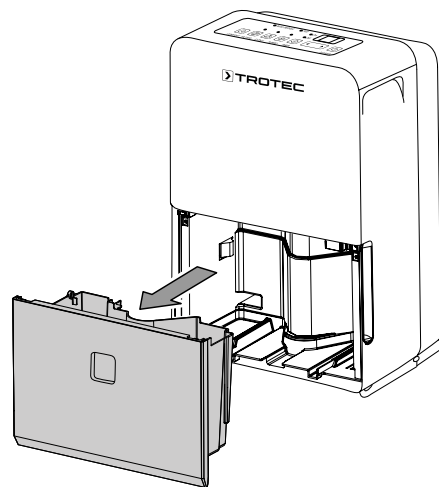

- Empty the condensation tank over a drain or sink.

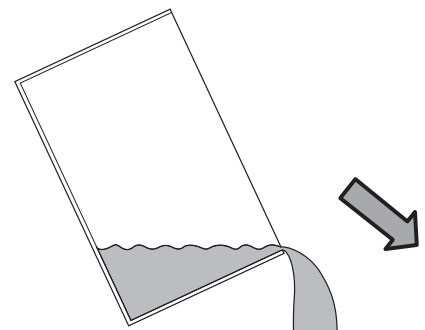

3. Rinse the tank with clear water. Clean the tank regularly using a mild cleaning agent (no detergent!).
4. **Cleaning the pump filter:** Remove the pump filter from the device interior. The filter looks like a small sieve and can be removed from the pump.
5. **Cleaning the pump filter:** Clean the filter with clear water and reattach it onto the pump.
6. Refit the condensation tank into the device.  
Make sure not to damage the float when inserting or removing the condensation tank.  
In doing so, make sure that the float is positioned correctly.  
In doing so, make sure that the condensation tank is inserted correctly, for otherwise the device cannot be switched back on.

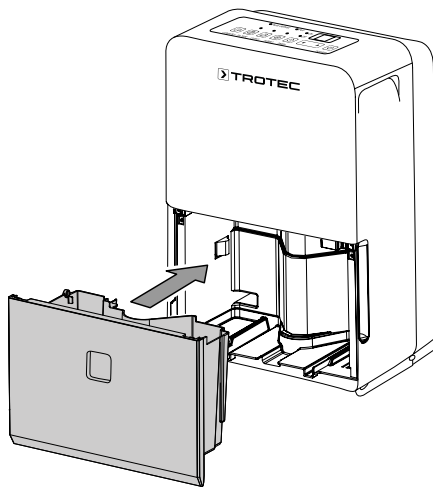

### Activities required after maintenance


If you want to continue using the device:

- Reconnect the device to the mains.

If you do not intend to use the device for a considerable time:

- Store the device according to the Transport and storage chapter.

**Technical annex**
**Technical data**


Parameter	Value	
<b>Model</b>	<b>TTK 96 E</b>	<b>TTK 127 E</b>
Dehumidification performance, max.	30 l / 24 h	50 l / 24 h
Dehumidification performance at 30 °C and 80 % RH	28.3 l / 24 h	46.8 l / 24 h
Air flow rate	Stage 1: 166 m <sup>3</sup> /h Stage 2: 191 m <sup>3</sup> /h	319 m <sup>3</sup> /h 353 m <sup>3</sup> /h
Operating range (temperature)	5 °C – 32 °C	5 °C – 32 °C
Operating range (relative humidity)	35 % – 100 % RH	35 % – 100 % RH
Suction side pressure	1.0 MPa	1.0 MPa
Discharge side pressure	2.6 MPa	2.6 MPa
Max. permissible pressure	2.6 MPa	2.6 MPa
Mains connection	1/N/PE ~ 220 – 240 V / 50 Hz	1/N/PE ~ 220 – 240 V / 50 Hz
Max. power consumption	0.72 kW	1.06 kW
Nominal current	3.2 A	5.4 A
Fusing 	3.15 A / 250 V AC	3.15 A / 250 V AC
Type of protection	IPX0	IPX0
Refrigerant	R290	R290
Amount of refrigerant	100 g	145 g
GWP factor	0.02 (IPCC6)	0.02 (IPCC6)
CO <sub>2</sub> equivalent	0.0000020 t	0.0000029 t
Water tank	3 l	6 l
Sound pressure level (at a distance of 1 m)	50 dB(A)	50 dB(A)
Dimensions (length x width x height)	386 x 260 x 500 mm	392 x 282 x 616 mm
Minimum distance to walls or other objects	top (A): 40 cm rear (B): 20 cm sides (C): 40 cm front (D): 20 cm	40 cm 20 cm 40 cm 20 cm
Weight	17 kg	19.5 kg

Circuit diagram TTK 96 E

16020100001051


Notes: Display and Fan's connctors must be match the actual indicates.

Notes:  
 This symbol indicates the element is optional, the actual shape shall prevail

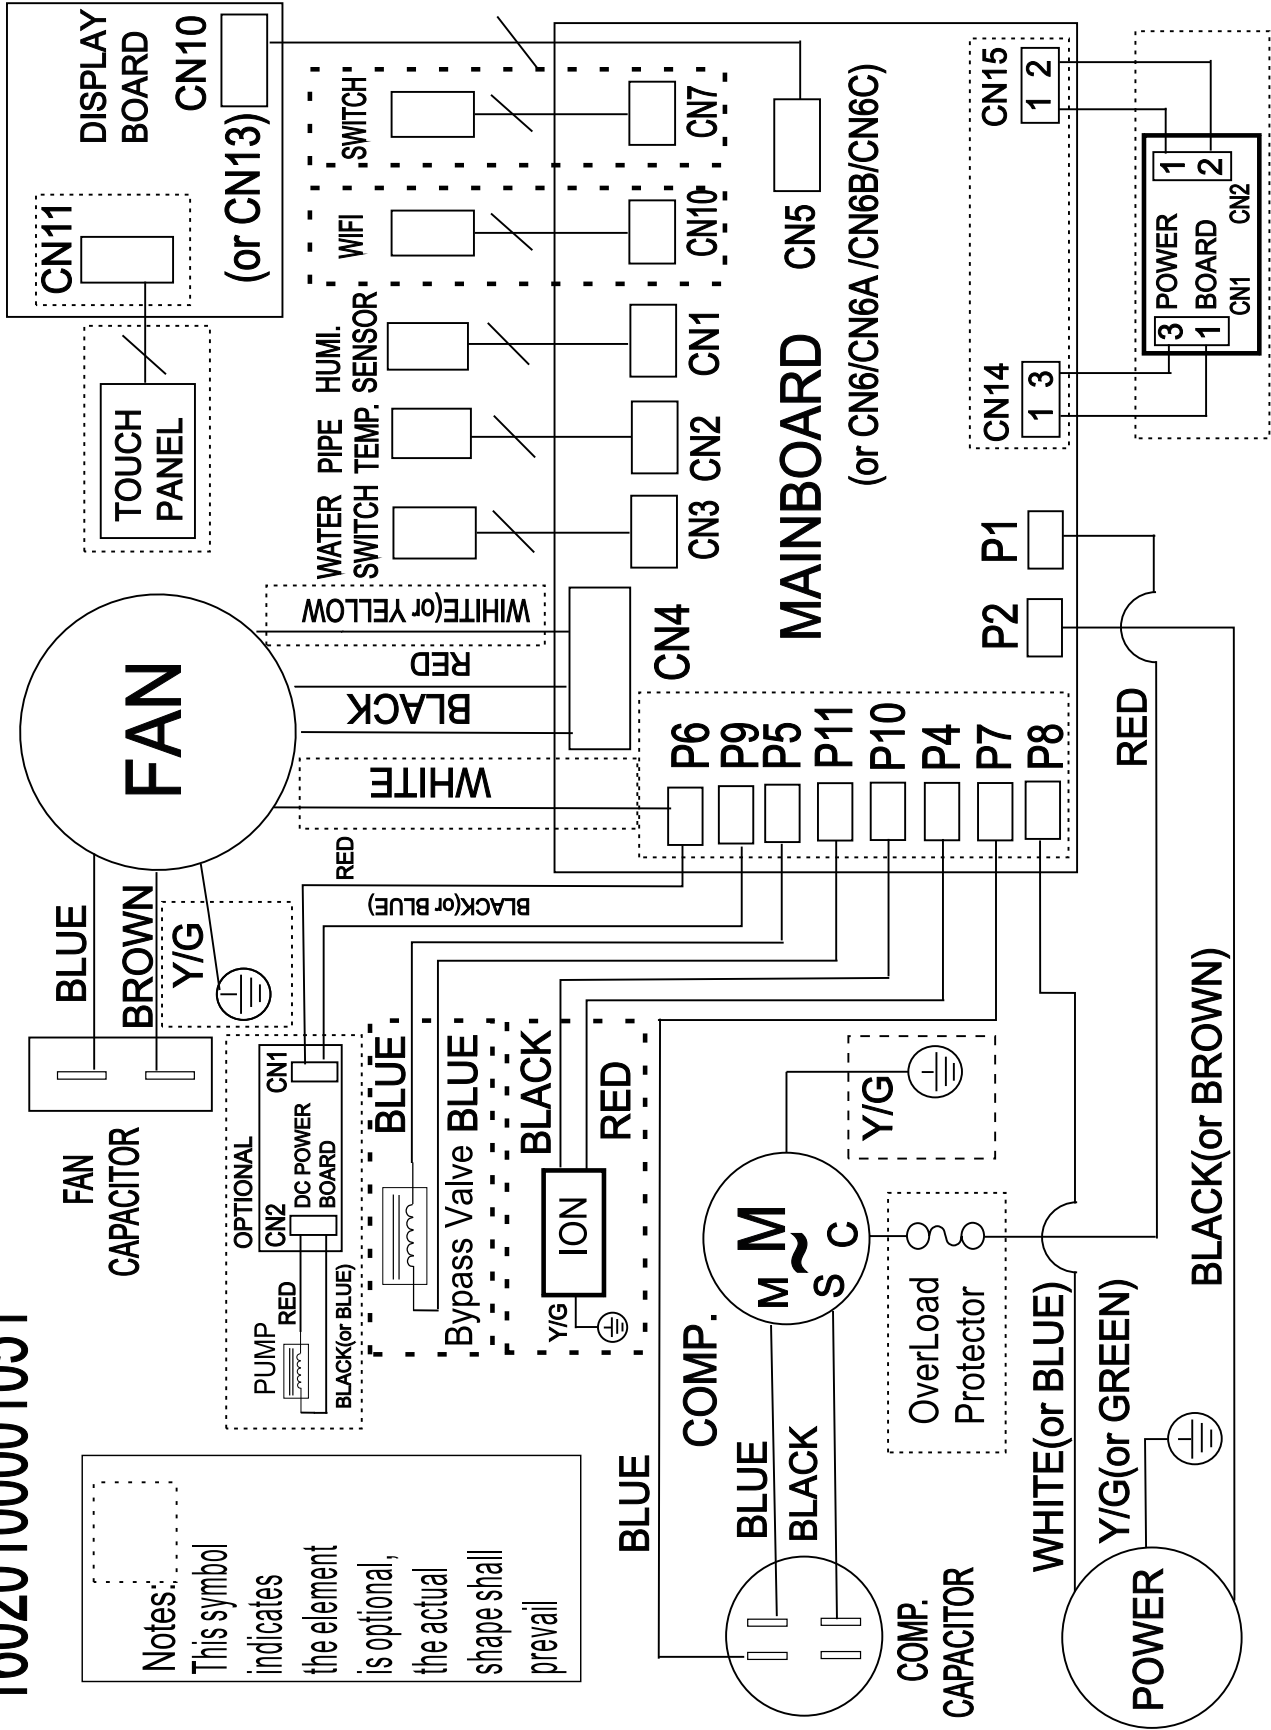

Circuit diagram TTK 127 E

Notes: Display and Fan's connctors must match the actual indicates.

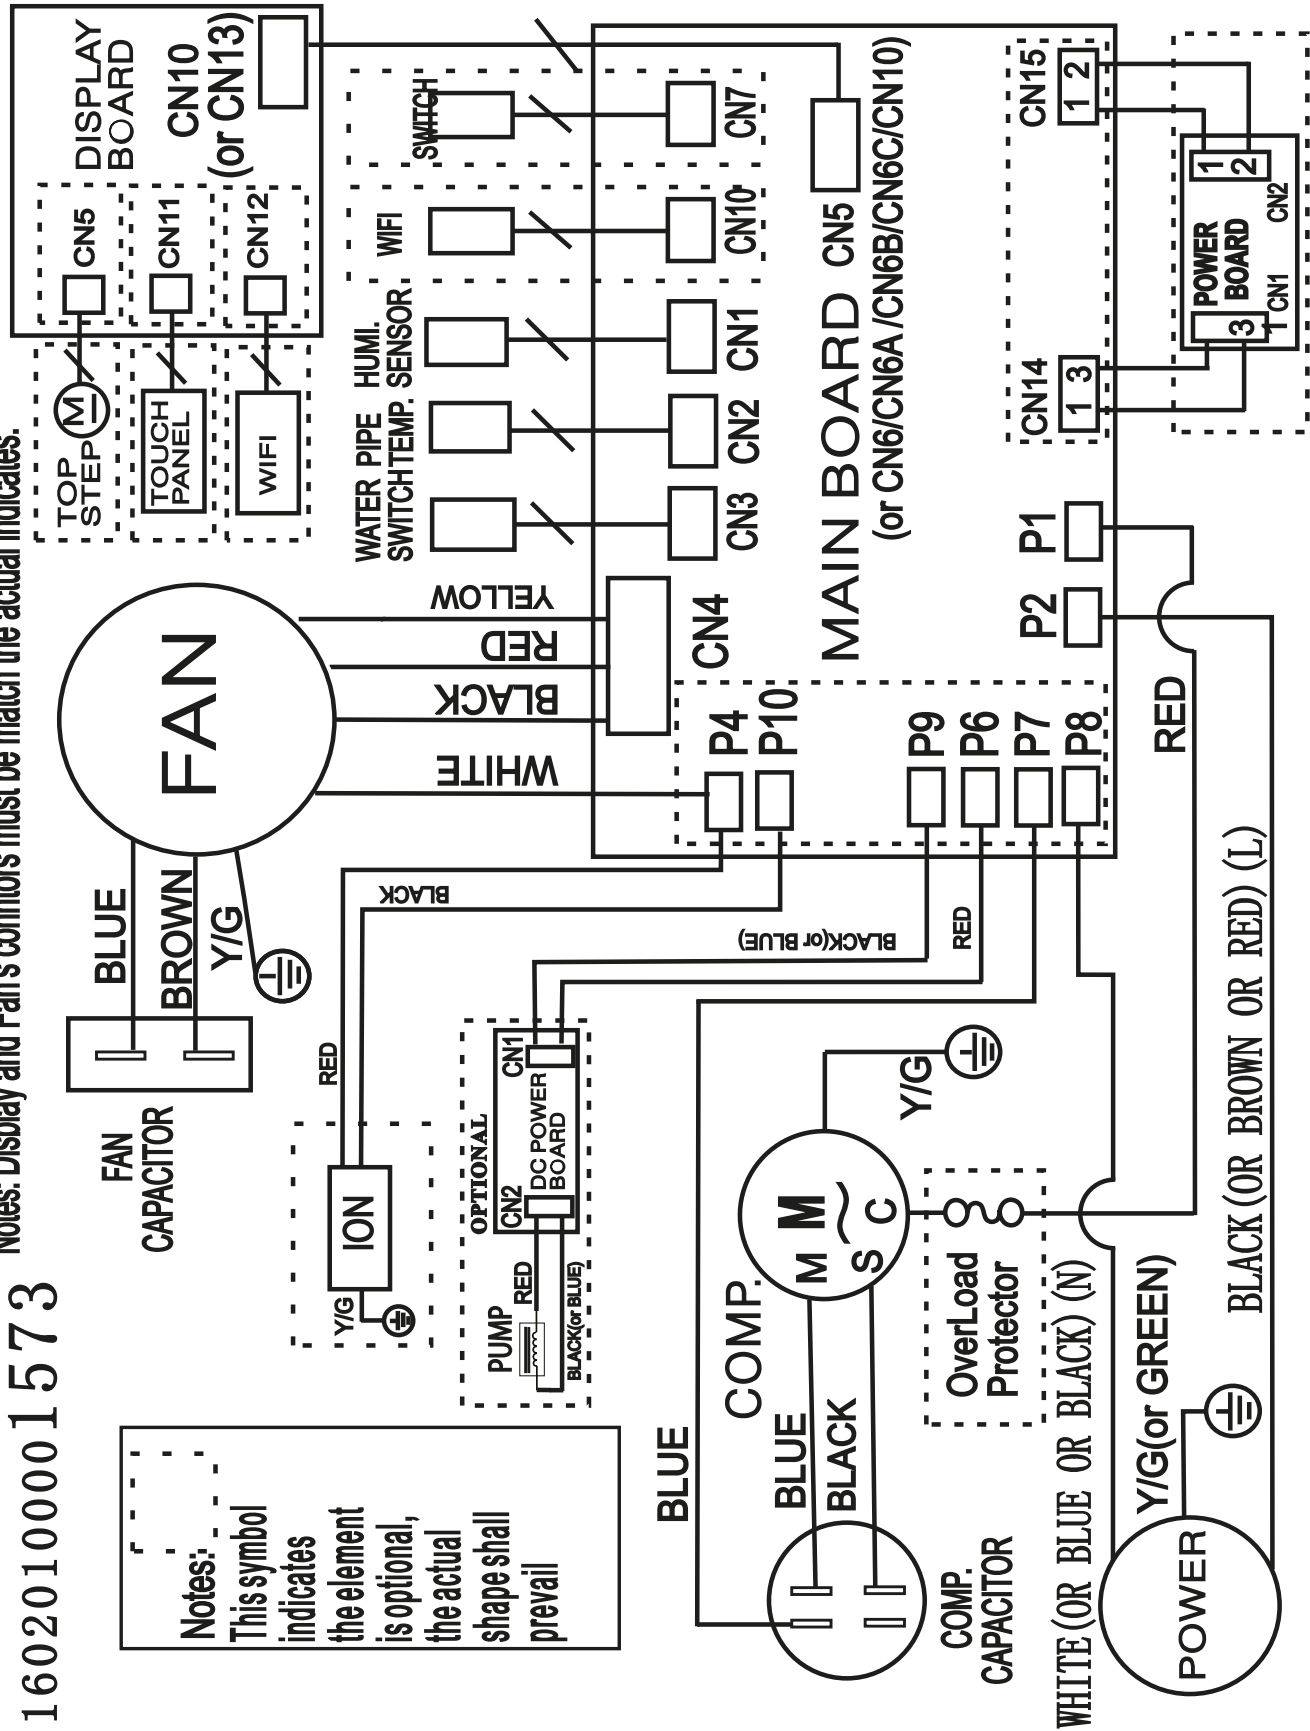


16020100001573

Notes:  
 This symbol indicates the element is optional, the actual shape shall prevail

Overview of spare parts TTK 96 E

**Note:** The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.

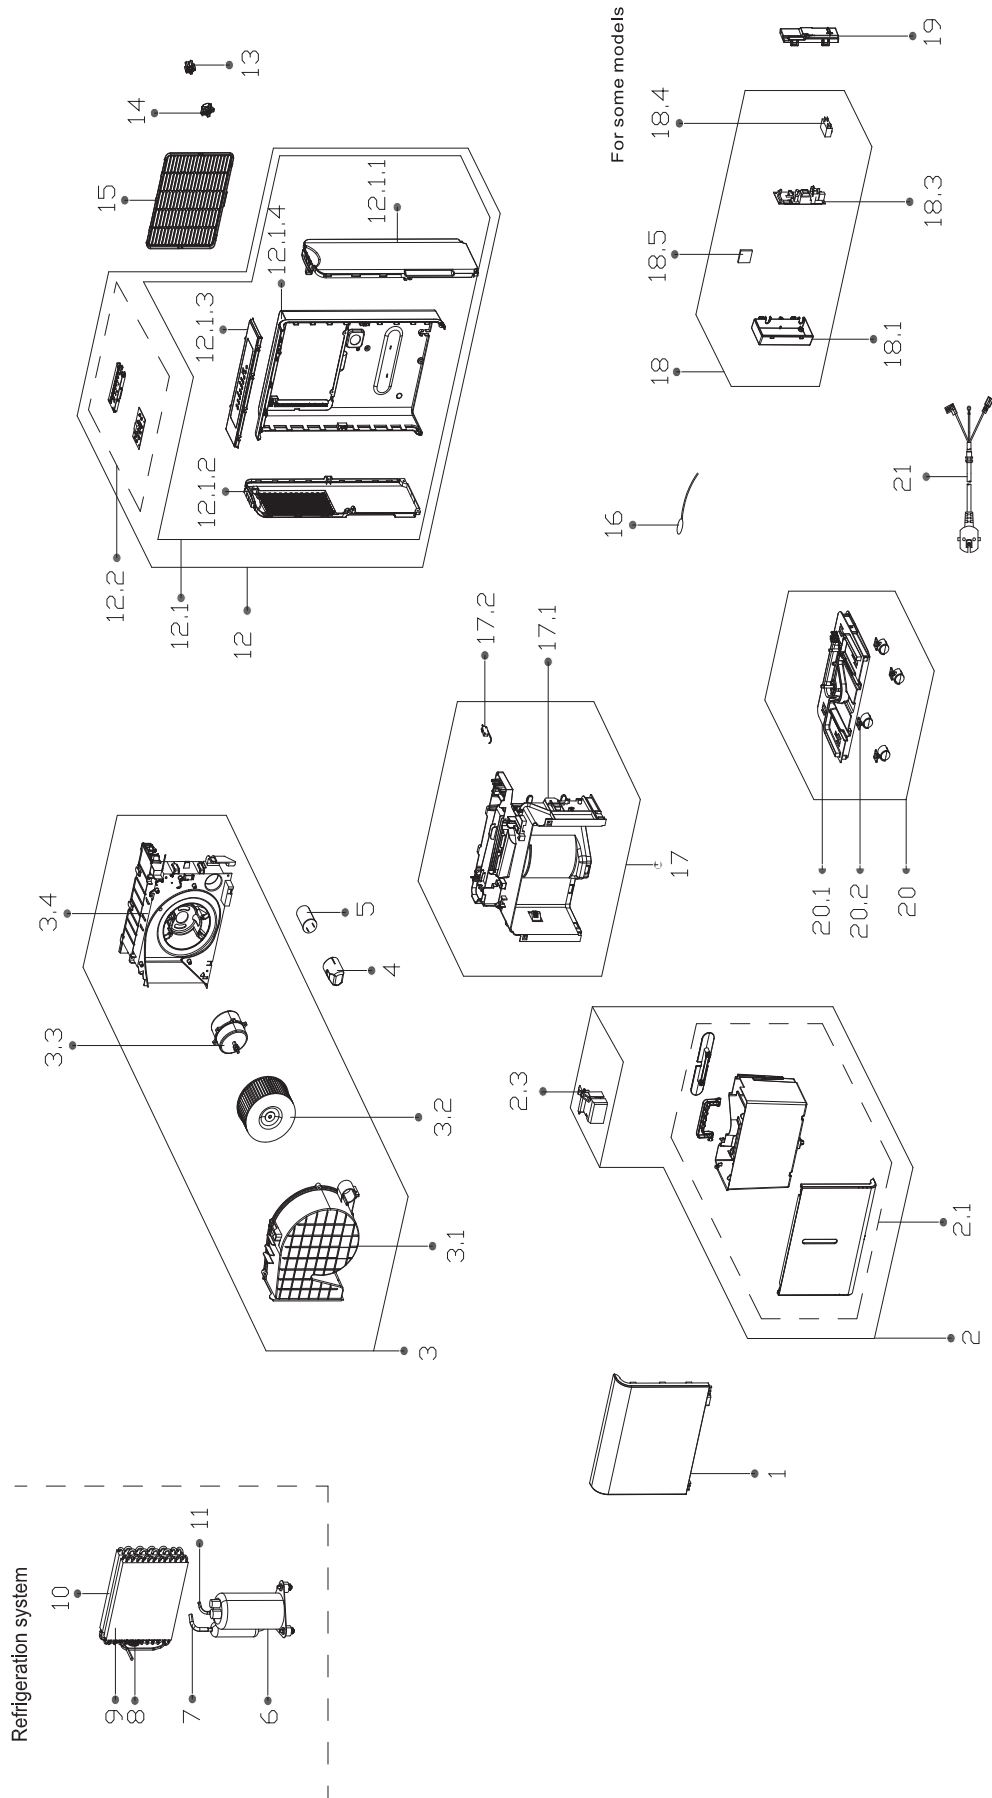


### Spare parts list TTK 96 E

No.	Part Name	Quantity	No.	Part Name	Quantity
1	Front Panel Subassembly	1	12.1.2	Left Supporter	1
2	Water Tank Assembly	1	12.1.3	Top Cover	1
2.1	Water Tank Subassembly	1	12.1.4	Rear Panel	1
2.3	Dobber Case	1	12.2	Display Box Subassembly	1
3	Volute Shell Assembly	1	13	Butt Joint Subassembly	1
3.1	Volute Shell	1	14	Drain Connector Of Water Pump	1
3.2	Centrifugal Fan	1	15	Air Filter	1
3.3	Single Phase Asynchronous Motor	1	16	Pipe Temperature Sensor	1
3.4	Supporter Subassembly Of Fan Motor	1	17	Middle Partition Board Assembly	1
4	Capacitor Cap	1	17.1	Partition Board Subassembly	1
5	Capacitor Of Compressor	1	17.2	Micro Switch	1
6	Fixed Speed Rotary Compression	1	18	Electronic Control Box Subassembly	1
7	Suction Pipe Assembly	1	18.1	Electronic Control Box	1
8	Capillary Assembly	1	18.3	Dehumidifier Main Control Board Subassembly	1
9	Evaporator Assembly	1	18.5	Humidity Sensor Board Module	1
10	Condenser Assembly	1	19	Cover Of Electronic Control Box	1
11	Discharge Pipe Assembly	1	20	Chassis Assembly	1
12	Rear Panel Assembly	1	20.1	Chassis Subassembly	1
12.1	Rear Panel Subassembly	1	20.2	Universal Wheel	4
12.1.1	Right Side Plate	1	21	Power Cord Subassembly	1

**Overview of spare parts TTK 127 E**

**Note:** The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.

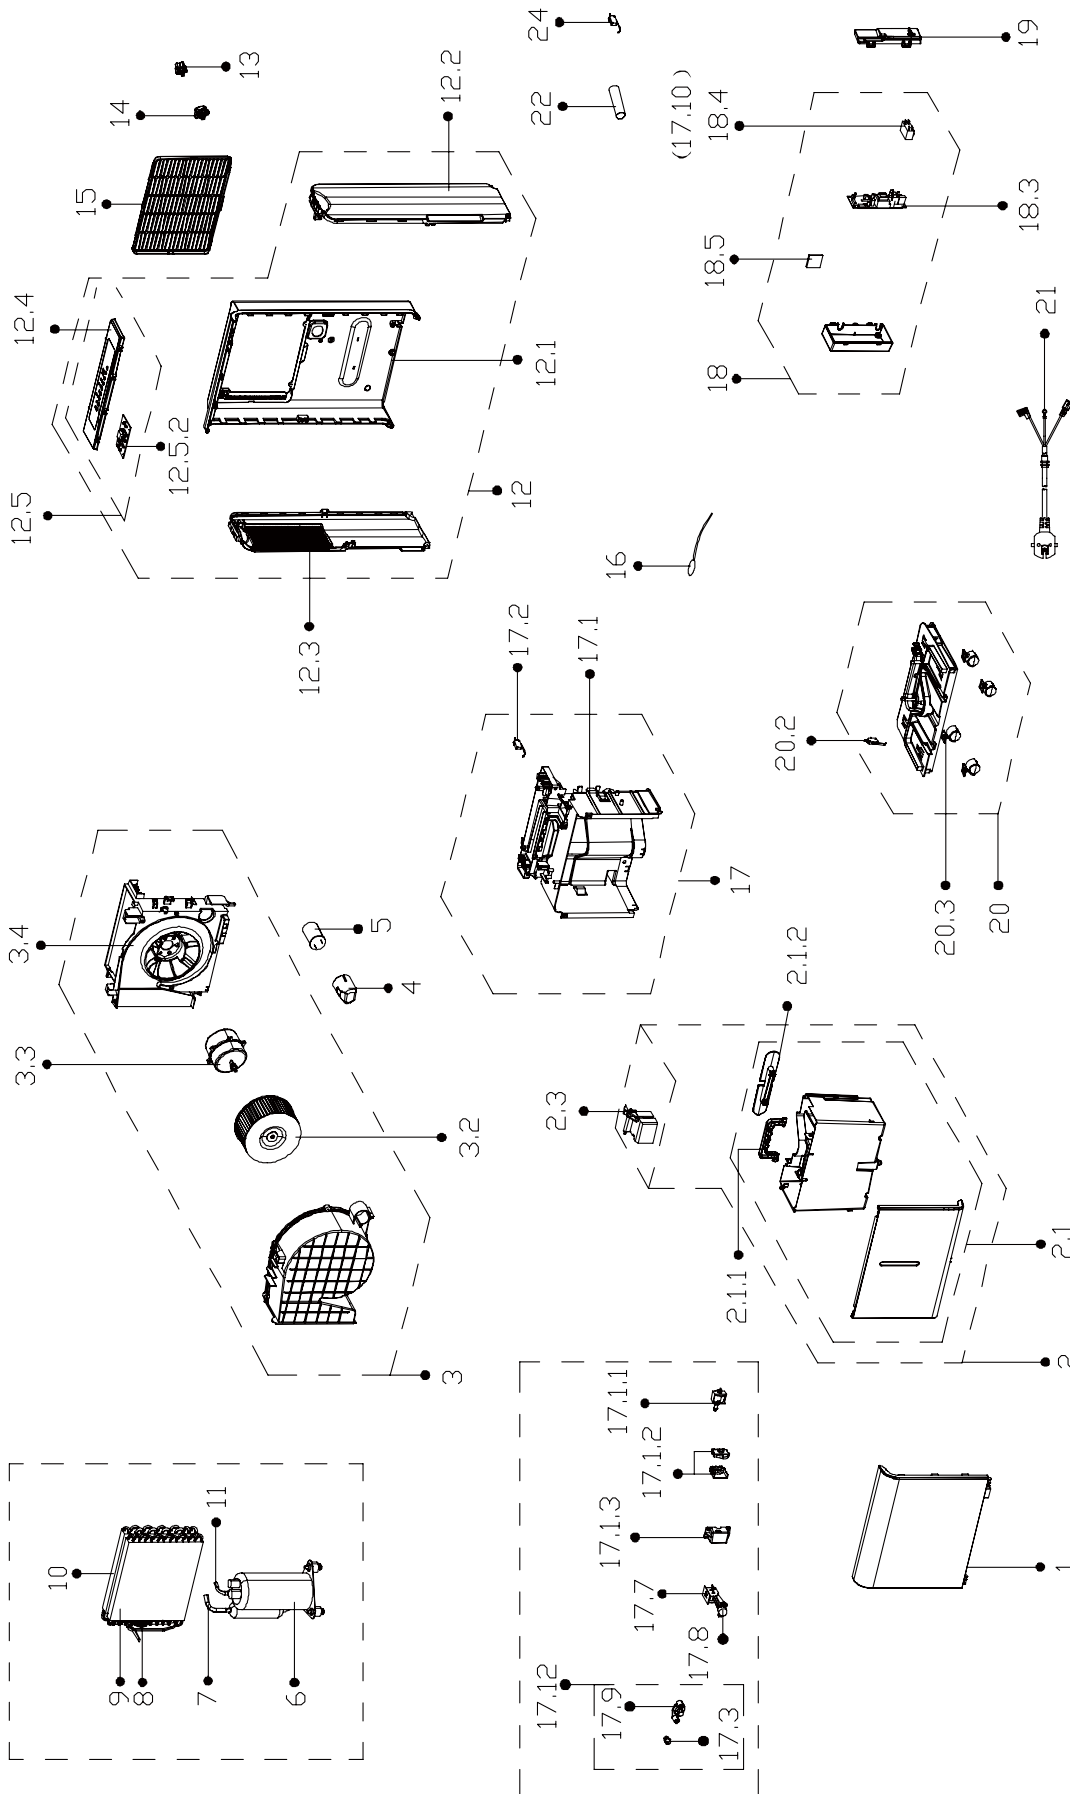

### Spare parts list TTK 127 E

No.	Part Name	Quantity	No.	Part Name	Quantity
1	Front Panel Assembly	1	14	Cover For Drain Connector Assembly	1
2	Water Tank Assembly	1	15	Air Filter	1
2.1	Water Tank Subassembly	1	16	Pipe Temperature Sensor	1
2.1.1	Handle Of Watertank	1	17	Middle Partition Board Assembly	1
2.1.2	Bobbin Winder	1	17.1	Partition Board Assembly	1
2.3	Dobber Case	1	17.1.1	Water Pump	1
3	Volute Shell Assembly	1	17.1.2	Waterproof Rubber Ring	1
3.2	Centrifugal Fan	1	17.1.2	Waterproof Rubber Ring	1
3.3	Single Phase Asynchronous Motor	1	17.1.3	Installation Box Of Water Pump	1
3.4	Supporter Subassembly Of Fan Motor	1	17.2	Micro Switch	1
4	Capacitor Box	1	17.7	Installation Bracket	1
5	Capacitor of Compressor	1	17.8	Butt Joint Subassembly	1
6	Fixed Speed Rotary Compressor	1	17.10	Fan Motor Capacitor	1
7	Suction Pipe Assembly	1	17.12	Butt Joint Subassembly	1
8	Capillary Assembly	1	18	Electronic Control Box Subassembly	1
9	Evaporator Assembly	1	18.3	Dehumidifier Main Control Box Subassembly	1
10	Condenser Assembly	1	18.5	Humidity Sensor Subassembly	1
11	Discharge Pipe Assembly	1	19	Cover Of Electronic Control Box	1
12	Rear Panel Assembly	1	20	Chassis Assembly	1
12.1	Rear Panel	1	20.3	Universal Wheel	4
12.2	Right Side Plate	1	21	European Standard Power Cord	1
12.3	Left Supporter	1	22	Drain Pipe	1
12.4	Top Cover	1	22	Drain Pipe	1
12.6	Display Box Subassembly	1	24	Microswitch	1
13	Butt Joint Subassembly	1			

## Disposal

Always dispose of packing materials in an environmentally friendly manner and in accordance with the applicable local disposal regulations.



The icon with the crossed-out wheeled bin indicates that this device and any associated components must not be disposed of with household waste at the end of their life, in accordance with the Waste Electrical and Electronic Equipment Directive (2012/19/EU) and national laws.

You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your municipality or local administration. You can also find out about other return options that apply for many EU countries on the website <https://hub.trotec.com/?id=45090>. Otherwise, please contact an official recycling centre for electronic and electrical equipment authorised for your country.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.

Have the refrigerant (propane) disposed of appropriately and according to the national regulations by a company with the relevant certification (European Waste Catalogue 160504).

### Only for United Kingdom

According to Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) devices that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Trotec GmbH

Grebbener Str. 7  
52525 Heinsberg  
Germany

☎ +49 2452 962-0

☎ +49 2452 962-200

✉ [online@trotec.com](mailto:online@trotec.com)

[www.trotec.com](http://www.trotec.com)